
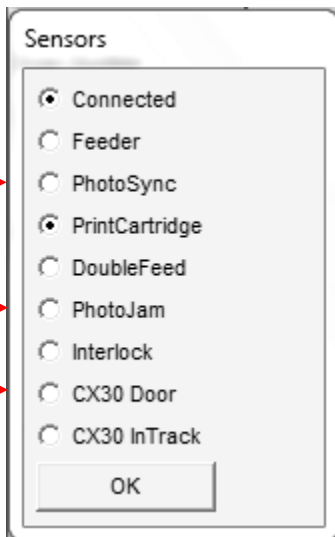


## CX30 – Sensor Location & Active Sensor Status Display in ScanLite2

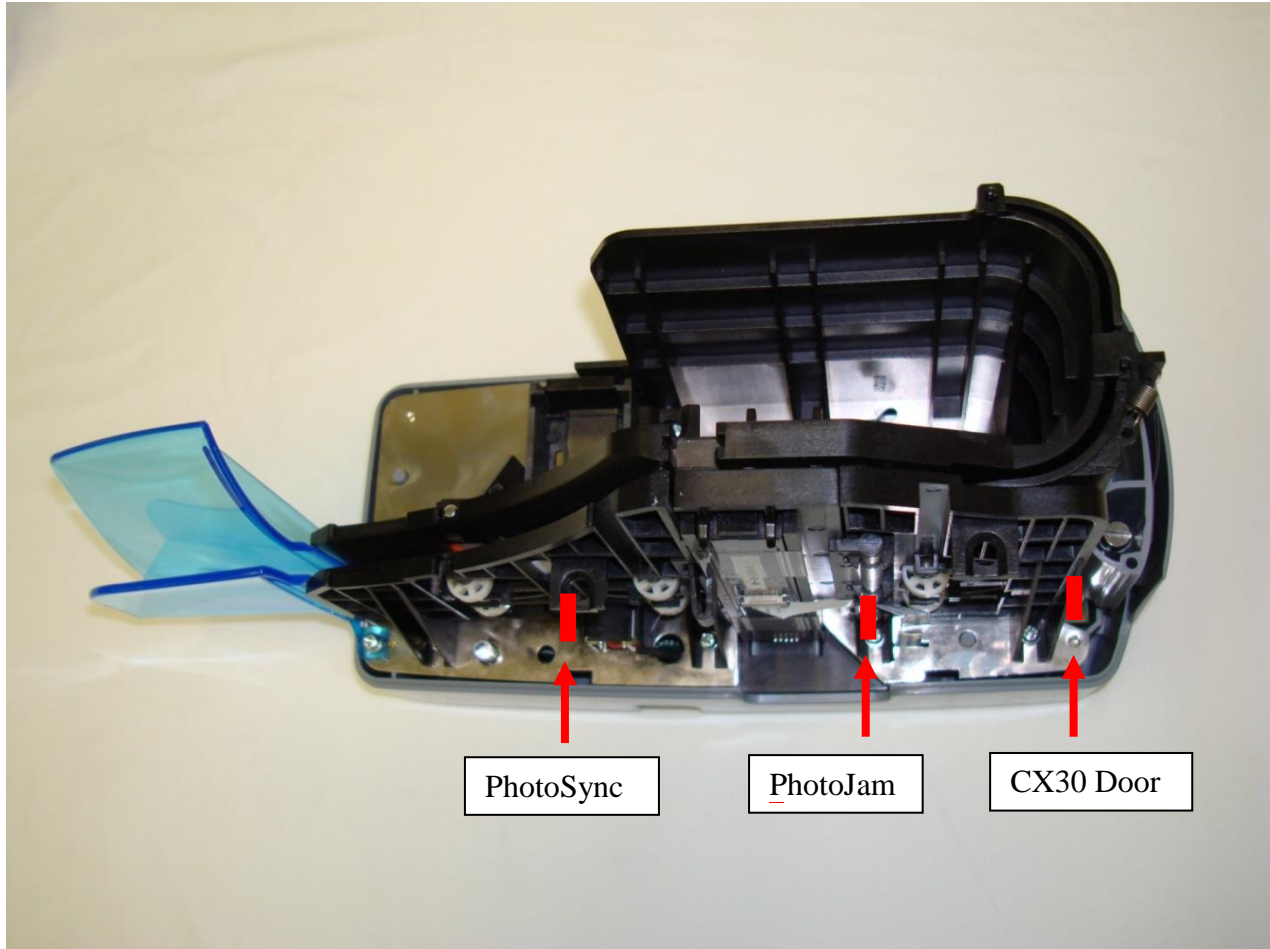

When a sensor is highlighted by the black dot, that indicates the sensor is active.

### Possible Causes Based on Sensor Status

Default indicators will show **Connected & PrintCartridge** active when the LED is Green and a Cartridge is installed.

**PhotoSync** – Look between the walls for any debris. Blow out with compressed air. If still active, sensor may have failed.

**PhotoJam** – This is the sensor just past the outer camera. Open the outer camera door to check for a paper or debris blocking the sensor.

**CX30 Door** – The Exit door is in the open position or the sensor is blocked.

Typical causes for a 'No Motor Start' condition are:

- There is no ink cartridge present and the application expects to endorse on the rear.
- The PhotoSync or PhotoJam sensor may be blocked or bad.